

## RX 350/500 (Front Half Spoiler)

1. Temporarily fit the product to the vehicle, remove the original bolts as shown in fig.2-a, and temporarily assemble the product to the vehicle using the original bolts on the attached mounting holes (large) mark the mounting holes on the vehicle as shown in fig 3, and remove the product.
2. Drill a 3.0mm hole at the point marked in 1.
3. Thoroughly degrease the product mounting surface of the vehicle, peel off a small portion of the release paper from the double-sided tape in part 1 of the figure, bend it outward, and temporarily attach it to the vehicle. while checking the overall balance. peel off the release paper and press it down.
4. Fix the product to the hole made in 4.2 using accessory A, and fix the spoiler to the spoiler to the small mounting hole side of the accessory using accessories C and D as shown in fig 2-a and then tighten all parts.

Fig.1



Fig.2

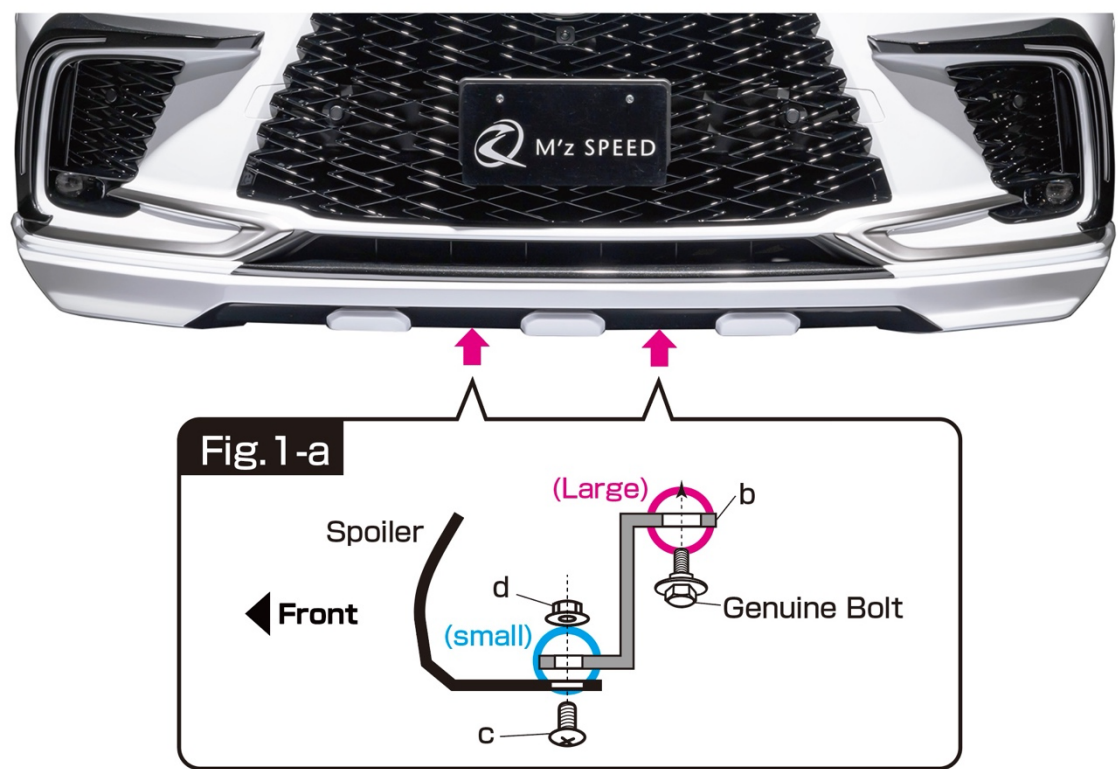


Fig.3

