

RX 350/500 (Rear Under Spoiler)

1. Temporarily fit the product to the vehicle, and to fig 2-a in fig 2 to remove the original fasteners, and temporarily assemble the product to the vehicle using the original fasteners on the attached mounting hole (large). mark the mounting hole on the vehicle in fig 3 and remove the product.
2. Drill a 3.0mm hole at the point marked in 1
3. Thoroughly degrease the product mounting surface of the vehicle, peel off a small portion of the release paper from the double-side tape in part 1 of the figure, bend it outward, and temporarily attach it to the vehicle. while checking the overall balance, peel off the release paper and press it down.
4. 2. fix the product to the hole drilled in step 2 using accessories A, and then fix the spoiler to the small mounting hole side using accessories C and D in fig 2-a.

Fig.1



Fig.2

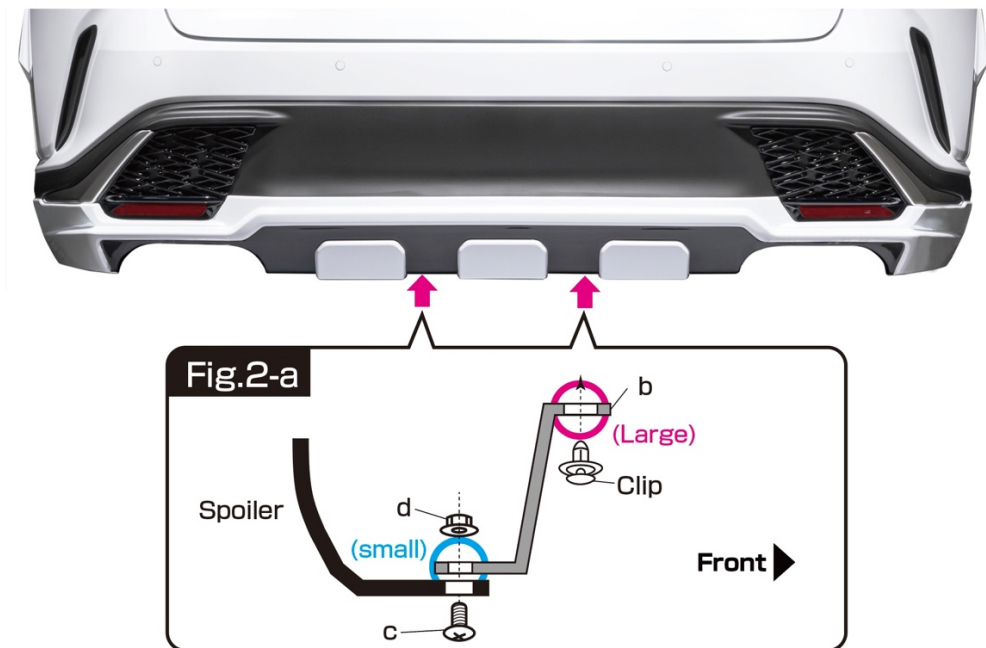


Fig.3

