

CROWN SPORT (Front Half Spoiler)

1. Trial fit the product to the vehicle and temporarily fasten it using the OEM bumper fasteners as shown in fig 2-a mark the spoiler installation position on the vehicle with masking tape or something similar.
2. Mark 3 ➡ the bumper through the mounting holes on the spoiler as shown in fig.3 Then remove the spoiler.
3. Drill a 3.0mm hole at the point marked in step 2.
4. Thoroughly degrease the product mounting surface of the vehicle ,peel off a small portion of the release paper from the double -sided tape in fig,1,fold it outward and temporarily attach it to the vehicle , while checking the overall balance peel off the vehicle and press it down.
5. For ➡ the part in fig.3 please refer to fig.3 a and secure it from the spoiler to bumper using accessory a.
6. As shown in fig.2. secure the spoiler to the bumper using the original fasteners.

Fig.1



Fig.2

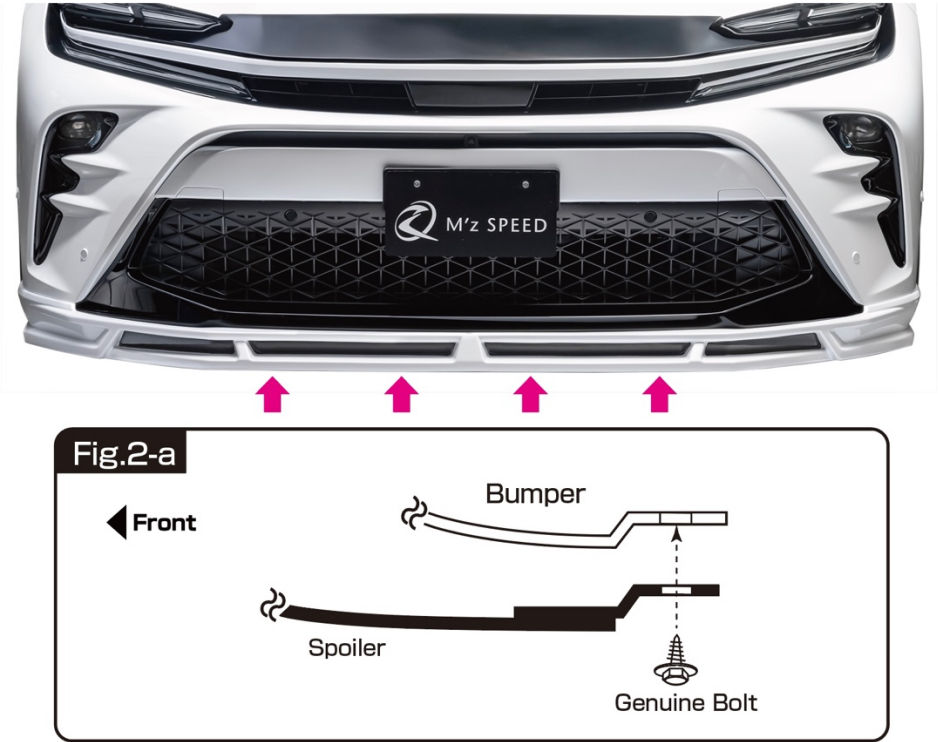


Fig.3

