

CROWN SPORT (Rear Under Spoiler)

1. Trial fit the product to the vehicle, and ➡ temporarily fasten the product to the vehicle using the OEM bumper fasteners as shown in fig.2-a mark the spoiler installation position on the vehicle with masking tape or similar.
2. Mark the bumper through the mounting holes on the spoiler as shown in fig 3 then remove the spoiler.
3. 2 drill a 3.0mm hole at the point marked in step 2.
4. Thoroughly degrease the product mounting surface of the vehicle, peel off a small portion the release paper from the double-sided in fig 1, fold it outward, and temporarily attach it to the vehicle. while checking the overall balance, peel off the release paper from the center of the vehicle and press it down.
5. for the ➡ part in fig.3 please refer to fig 3-a and secure it from the spoiler to the bumper using accessory a.
6. fig.2 ➡ fix the spoiler to the bumper using the original fasteners.

Fig.1



Fig.2

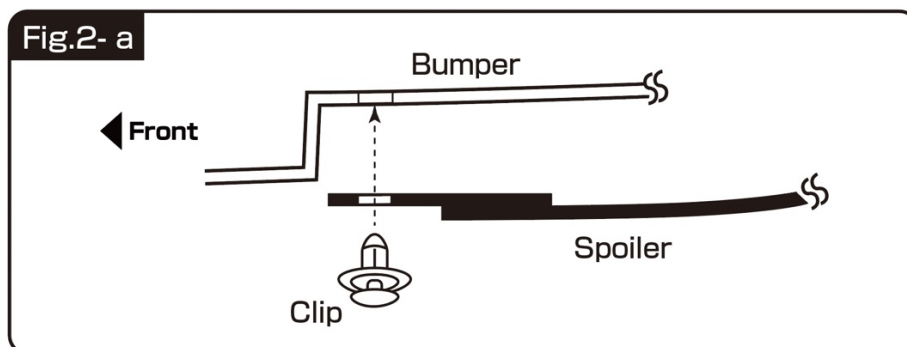


Fig.3

