

LM500 (Front Half Spoiler)

1. Temporarily align the product to the vehicle, and refer to Fig. 2-a and Fig. 2-b for the part shown in Fig. 2.

Temporarily fix the stay hole (small) of attachment c to the spoiler side using attachment a and b, and fix the stay hole (large) to the bumper using the bumper mounting bolt.

The stay holes (large) should be secured with the bumper mounting bolts. Also, mark the spoiler mounting position on the vehicle with masking tape.

Mark the position of the spoiler on the vehicle with masking tape. 2.

Remove the spoiler from the vehicle and thoroughly degrease the surface where the product is attached and the surface where the product is attached.

2. Remove the spoiler from the vehicle, degrease the surface to which the product is attached and the surface to which the product is attached, and apply the supplied “D” to the area shown in Fig. 1. 3.

3. read the advice on the use of the sealer in the attached sheet carefully before attaching the spoiler to the vehicle.

Fix the spoiler to the vehicle with masking tape or duct tape, and hold it until the sealant is fully cured.

4. Tighten the attached c. Fasten the attached c.

Fig.1



Fig2



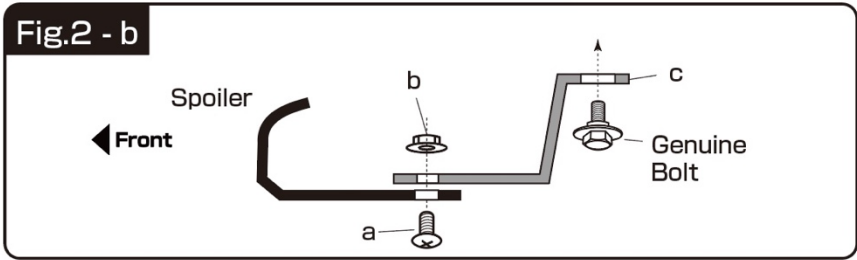


Fig.3

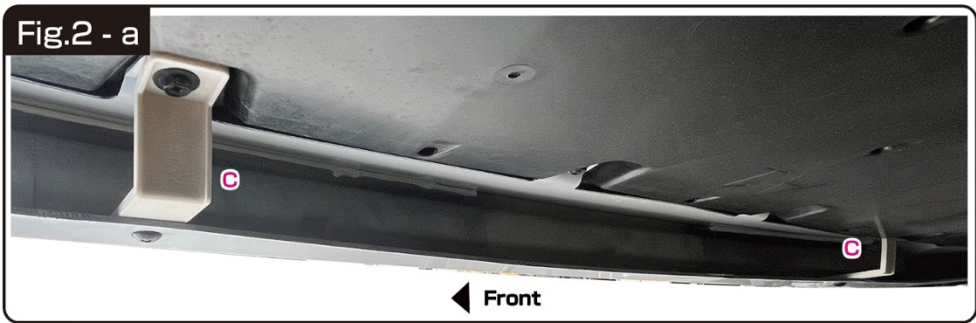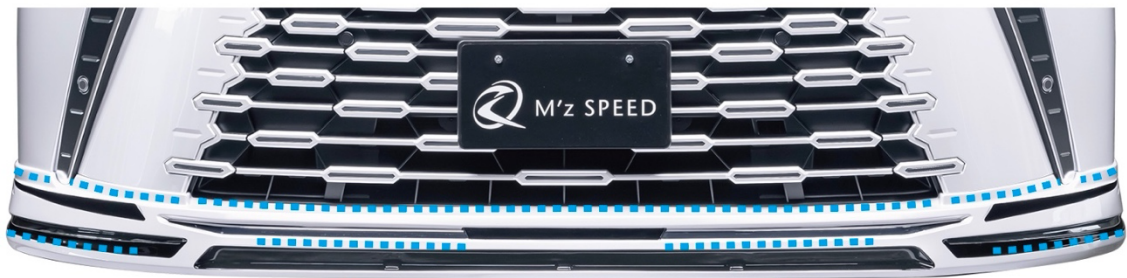