

LM500 (Rear Under Spoiler)

1. temporarily align the product to the vehicle, and refer to Fig. 2-a and Fig. 2-b for the part shown in Fig. 2. Temporarily fix the stay hole (small) of accessory c to the spoiler side using accessory a and b, and fix the stay hole (large) to the spoiler side using the factory fasteners. The large stay holes are to be fixed together with the factory fasteners. Also, mark the spoiler mounting position on the car with masking tape or the like.

Mark the spoiler mounting position on the car with masking tape.

2. Remove the spoiler from the vehicle, degrease the surface to which the product is attached and the surface to which it is attached thoroughly, and apply the supplied "d" to the area shown in Fig. 1. 3.
3. read the advice on the use of sealer in the attached sheet carefully before attaching the spoiler to the vehicle. Fix the spoiler to the vehicle with masking tape and duct tape.

Fix the spoiler firmly to the vehicle with masking tape and gummed tape, and hold it until the sealant is fully cured.

4. Tighten the attached c. Fasten the fixing part.

Fig.1

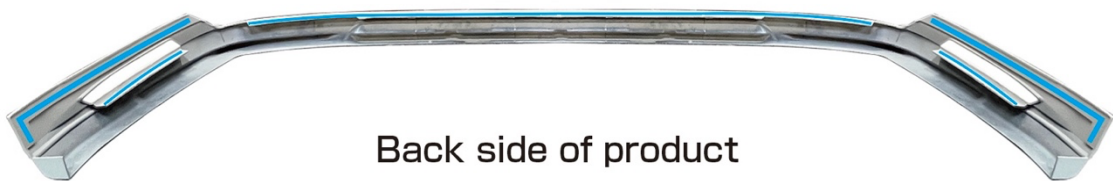


Fig.2



Fig.2 - a



Fig.2 - b

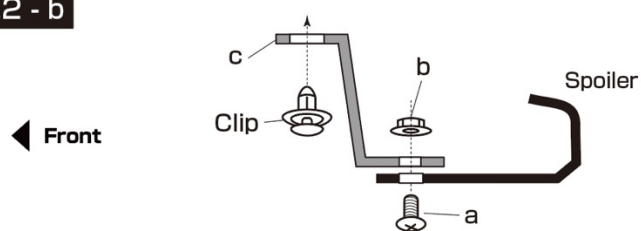


Fig.3

