

LM500 (Side Step)

1. Before painting, cut off the reinforcement in Fig. 1.

Figure 1-a is the unnecessary part. After cutting the unnecessary part in front of the aperture, adjust the height to the aperture and smooth it with sandpaper.

2. Cut off the reinforcement section in Fig. 1 before the opening.

Decide the installation position in the order of ①, ②, and ③ in Figure 1. Pay attention to the overall balance and the interference when opening/closing the door.

Mark the installation position with masking tape, etc.,

3. degrease the vehicle and the spoiler mounting area thoroughly.

4. Apply the supplied “a” to the area shown in Fig. 1.

5. read the advice on the use of the sealer in the separate sheet carefully and install the spoiler to the vehicle. Secure the spoiler to the vehicle with masking tape and duct tape, and hold it in place until the sealant has fully cured . HOLD the sealant until it is fully cured. Please hold the spoiler until the sealant is fully cured.

Fig.1


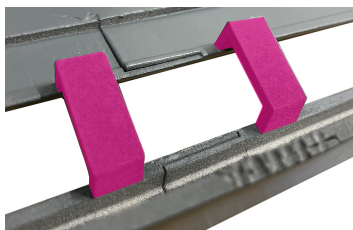


Fig.1-a

Fig.2

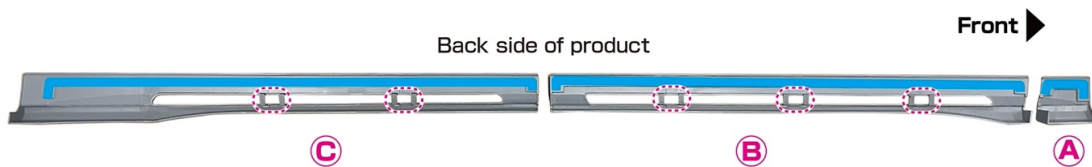