TESLA Model Y/YL

(YL1YT) (YL3YT)
2025/3- 2026/7-
Rear Under Spoiler


Set up Guide

EXCLUSIVE ZEUS

■ This product is made of ABS / AES.

This guide explains how to install the M'z SPEED product on the vehicle. For safe and proper installation, please read this guide carefully before starting the work.

Fig. 1 Rear View of Product

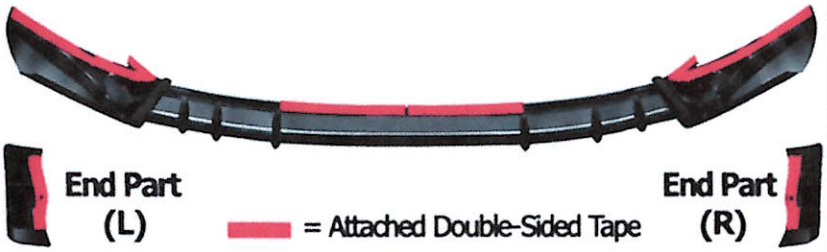

Included Part	Part Name	Qty.
	a : M4 x 12 Tapping Screw	2
	b : M4 x 16 Tapping Screw	4
	c : M6 x 15 Hex Bolt	2
	d : M6 Flange Nut	2
	e : 3.0 mm Rubber Washer	4
	f : Spacer (Type 2)	2
	g : 3M™ PAC Primer K-500	1

Fig. 2



Fig. 2-a


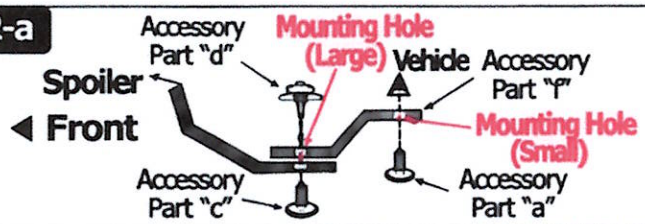


Fig. 3



Fig. 3-a

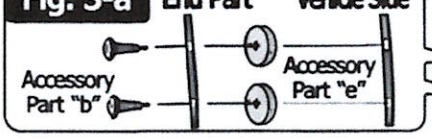

End Part

* The figure shows the left side. Perform the same process on the right side.

Installation Procedure

1. Temporarily fit the product to the vehicle and mark the mounting position with masking tape or similar. Referring to Figure 2-a, temporarily attach the spoiler to the large mounting hole side of part f using parts c and d, and then mark the vehicle through the small mounting hole.
2. Drill a 3.0mm hole at the marked location.
3. Thoroughly degrease the vehicle's mounting surface and apply the included product (g) to the area where the double-sided tape will make contact.
4. Fig 1 ▬ shows the double-sided tape. Peel off a small portion of the release paper, fold it outwards, and temporarily attach it to the vehicle. While checking the overall balance, peel off the remaining release paper and press firmly. Refer to Figure 2-a and secure it to the vehicle using the included mounting holes (small) with the included part a, then tighten all parts securely.
5. Attach the end part shown in Figure 1 to the position shown in Figure 3, drill a 3.0mm hole in the vehicle through the mounting hole, insert included part e in between, and secure with included part b. (Do the same for both sides.)

Regarding Primer

Caution: When using the primer, follow the instructions in the 3M™ PAC Primer K-500 instruction manual. Standard drying conditions: Allow to dry completely at 23°C for 10 minutes to 3 hours, ensuring that dust, dirt, and water droplets do not adhere to the surface. If the temperature is below 15°C, use a heater to warm the surface. To prevent yellowing of the painted surface, wipe off any excess primer with alcohol or a similar product.

■ Cautions

※ After unpacking, please check that all accessories are present and undamaged.
※ This product is made of ABS / AES molded plastic. Applying excessive force may cause damage, so please do not do so. Please note that damage caused by such force will not be covered under warranty.
※ To prevent any damage from modification due to vehicle and product tolerances, so please be sure to check the installation compatibility. Please protect the vehicle and product with tape to prevent scratches, etc.
※ Please be aware this we cannot accept any responsibility for malfunctions or accidents caused by improper processing, assembly, or misuse of this product.
※ After installing this product, do not subject it to impact or get it wet (e.g., car washing) for 24 hours.
※ The bolts and screws used to attach various parts may loosen over time, so please check them occasionally.
※ We cannot accept returns after installation.

■ Important Notes Before Painting

※ Always perform a fitting check before painting.
※ Due to the manufacturing process, burrs and voids may inevitably occur in the product. Please remove them during the painting and surface preparation stage.
※ Please be sure to use urethane-based paint specifically for dry resins. Also, please allow the painting may at room temperature. Heat drying may cause warping or deformation of the framework, wise understand that we cannot accept any claims regarding the paintwork.
※ We cannot accept returns after painting or installation.

M'z SPEED
M'z SPEED Co., Ltd.
3-8-7 Shinkitajima, Higashiosaka City, Osaka 578-0966, Japan
Email : randi@mzspeed.co.jp
WA : +81 80-7675-5646